

SA4

## 15 in side Cable Carrier

### PRODUCT DESCRIPTION

15 in side Cable Carrier

Hareketli kablo kanalının iç ölçüleri 15×15 mm. olup açık modeldir. Çalışma şartlarının ağır olmadığı otomasyon sistemleri için tasarlanmış olup üstü açılabilir çitalıdır.

- PA6 %30 cam elyaf
- Çalışma sıcaklığı -30c + 130c
- Kullanılabilecek maximum kablo çapı 10mm.dir
- Hız : 5m/s



30 Agustos Zafer Mah. Nasrettin Hoca Bulvarı No: 15 A/B  
Kayapa Organize Sanayi Bolgesi Nilufer / BURSA / TURKEY

info@crocodilecablecarrier.com

Tel: +90 224 441 06 88

Fax: +90 224 441 06 89

# SA4


## CABLE CARRIERS LIGHT SERIES

Inner Height (A) 15mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"> <li>• One side is fixed, other side is openable</li> <li>• Should be used in supporting trays</li> <li>• Suitable for short movement lengths</li> </ul>	SA4 015 R_01	40	15	15	20	24	0.224gr

 
Maximum working speed :5M/S

Radius MUST be given in your orders.Example:

SA4 015 R40

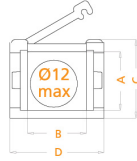



R mm	H mm	X mm	M mm	Y mm
40	20	103	69,5	186



L: Total length to be used  
K: Movement distance  
Y: Radius

$$L: \frac{K}{2} + Y$$

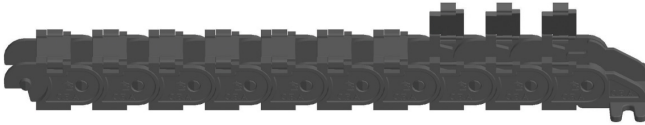

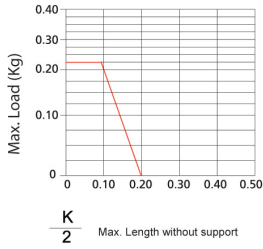
**IMPORTANT POINTS**

**Self-supporting Capacity Diagram**

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

**How to choose end bracket**
**End bracket**

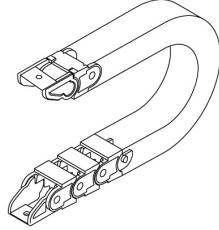End brackets are the parts to be used to fix the cable carrier to the machine or equipment



Should be attached to the both ends of the cable carrier


**How to use support rollers:**

- Support rollers should be used after 0.5 meter
- Make sure that the cap (cover) is fixed properly
- Use an appropriate hand tool (screw driver) to open the cap
- Be careful not to damage the fixing nail of the cap (cover)

CABLE CARRIER CODE	END BRACKET CODE	A	B
SA4 015 R40	SA4 B01	X	X

